

Contemporary Overbed Light with Decorative Accent Trim


Features:

White linen patterned acrylic front panel provides a soft glow accent to this contemporary three lamp T8 wall mount senior care over bed light. The champagne trim accents identify the graceful shape with both ambient and task light with a four way pull switch. Standard (120 volt only). Top diffuser is clear, and bottom diffuser is frosted white acrylic



Construction:

The ballast/wiring channel is formed from 22-gauge steel and is provided with keyhole mounting slots and wiring access. An internal divider provides separate lamp compartments for controlled up light and down light. The decorative bands are stamped steel and glued to the diffuser. Fixture can mount horizontally only. Power connections can be made in the fixture wiring channel or in a standard junction box (not included).

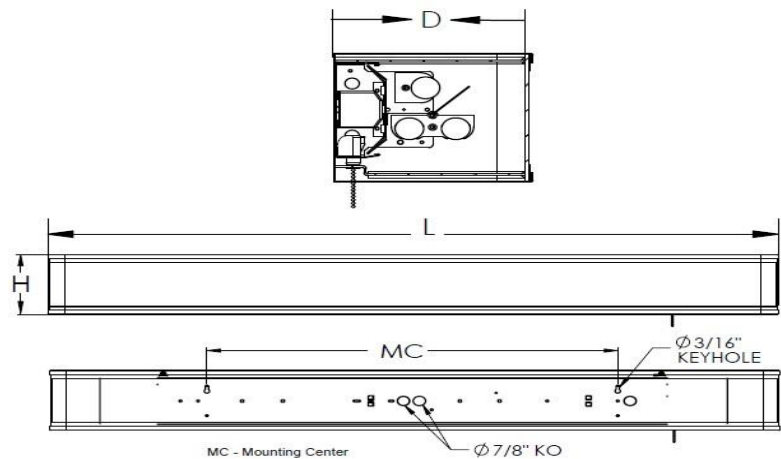

Finish:

All metal parts are finished in plated satin nickel or champagne. Internal housing is finished in a lighting grade baked white enamel.

Diffuser:

Diffuser is 0.070" thick matte white acrylic for the down light, clear frosted acrylic for up light, and a white linen pattern acrylic front. Frame mounts to electrical channel with two decorative screws.



Electrical (Florescent):

This unit is wired with two UL listed electronic high-power factor instant start ballasts for one up, two down T8 lamps at 120V- 50/60 Hz AC operation. Four position, three circuit pull switch (on up, on down, on both, all off) are standard and located toward the right end. LED nightlight and on/off pull switch is included.

Lamping:

For use with (3) T* lamps., not included.

Electrical (LED):

The unit is wired with two UL recognized LED Drivers. The shorter length fixtures produce 1350 source lumens upward, and 2700 down, while the longer fixtures provide 1800 source lumens upward and 3600 down. Four position pull switch (on up, on down, on both, all off) are standard and located near the right side of the fixture. LED nightlight with on/off control pull-switch is included.

Lamping:

Fixture includes LED modules producing a total of 4050 or 5400 source lumens in 3000K CCT. Rated for 50,000 hours

Certification:

All fixtures are cULus listed for damp locations.

Options:

120-277 universal voltage available without switch and nightlight. Optional Finishes: Champagne or Satin Nickel

Ordering Specifications:

FLORESCENT

Satin Nickel	Champagne	Qty	Lamp	H	L	D	MC
AL-8ENS523BHSAFX	AL-8ECA523BHSAFX	3	F25T8	4-5/8"	44-1/4"	6-1/2"	29-1/8"
AL-8ENS233BHSAFX	AL-8ECA233BHSAFX	3	F32T8	4-5/8"	56-1/4"	6-1/2"	41-1/8"

LED

Satin Nickel	Champagne	LED	Source Lumens	H	L	D	MC
NSNE03L000444BHSAFX	CANE03L000444BHSAFX	36W	1350 up/2700 down	4-5/8"	44-1/4"	6-1/2"	29-1/8"
NSNE03L004565BHSAFX	CANE03L004565BHSAFX	45W	1800 up/3600 down	4-5/8"	56-1/4"	6-1/2"	41-1/8"

