

Elegant Wood Trim Hospital Overbed Light

Features:

The white acrylic front panel provides a soft forward illumination to this contemporary three lamp T8 wall mount senior care overbed light. The wood trim accents identify the graceful shape providing both ambient and task light with a four way pull switch, standard (120 volt only). Top diffuser is clear, and bottom diffuser is frosted white acrylic.

Construction:

The ballast/wiring channel is formed from 22-gauge steel and is provided with obround mounting slots and wiring access. An internal divider provides separate lamp compartments for controlled up light and down light. The decorative frame is fabricated from solid wood. Fixture can mount horizontally only. Power connections can be made in the fixture wiring channel or in a standard junction box (not included).

Finish:


All wood parts are finished high gloss stained cherry or espresso. Internal housing is finished in lighting grade baked white enamel.

Diffuser:

Diffuser is 0.090" thick matte white acrylic for the front panel and down light, and clear frosted acrylic for up light. Frame mounts to electrical channel with two decorative screws.

Electrical (Fluorescent):

This unit is wired with two UL listed electronic high-power factor instant start ballasts for one up, two down T8 lamps at 120V- 50/60 Hz AC operation. Four position, three circuit pull switch (on up, on down, on both, all off) are standard and located toward the right end. LED nightlight and on/off pull switch is included.

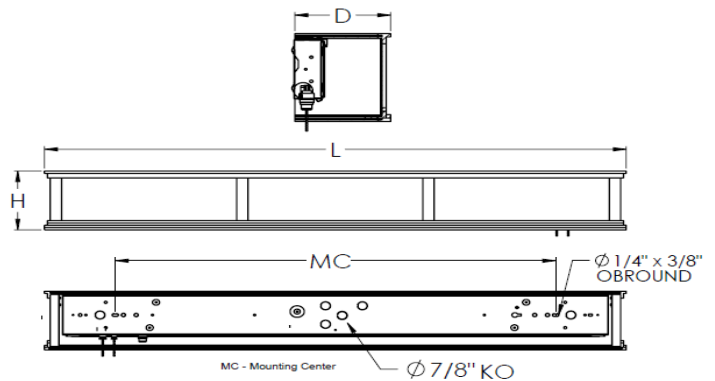

Lamping:

For use with (3) T8 linear lamps, not included.

Electrical (LED):

The unit is wired with two UL recognized LED Drivers. The shorter length fixtures produce 1350 source lumens upward, and 2700 down, while the longer fixtures provide 1800 source lumens upward and 3600 down. Four position pull switch (on up, on down, on both, all off) are standard and located near the right side of the fixture. LED nightlight with on/off control pull-switch is included.

Lamping:

Fixture includes LED modules producing a total of 4050 or 5400 source lumens in 3000K CCT. Rated for 50,000 hours

Certification:

All fixtures are cULus listed for damp locations.

Options:

120-277 universal voltage available without switch and nightlight.

Ordering Specifications:

FLORESCENT

Cherry	Expresso	Qty	Lamp	H	L	D	MC
8EHC523BMCAFX	8ESE523BMCAFX	3	F25T8	6"	39-5/8"	5-3/4"	26-3/4"
8EHC233BMCAFX	8ESE233BMCAFX	3	F32T8	6"	51-5/8"	5-3/4"	38-3/4"

LED

Cherry	Expresso	LED	Source Lumens	H	L	D	MC
HCNE03L000493BMCAFX	SENE03L000493BMCAFX	36W	1350 up/2700 down	6"	39-5/8"	5-3/4"	26-3/4"
HCNE03L004515BMCAFX	SENE03L004515BMCAFX	45W	1800 up/3600 down	6"	51-5/8"	5-3/4"	38-3/4"

