


LED Satin Aluminum Contemporary Vanity Light Item #XVMAS712VBBAFX


Features:

- Geometric banded contemporary two-lamp T8 wall mount vanity has aluminum bands in a natural satin finish
- Diffuser is frosted white acrylic. Fixture has an open top for indirect lighting and is horizontally wall mounted with power supply connections made inside the housing or to a 2" x 4" handy-box (not included)
- Off set J-box mounting is possible (consult factory)



Construction:

- The ballast/wiring channel is formed from 22-gauge steel and is provided with keyhole mounting slots and wiring access
- The decorative bands are .060" thick extruded aluminum that is screwed to vertical supports

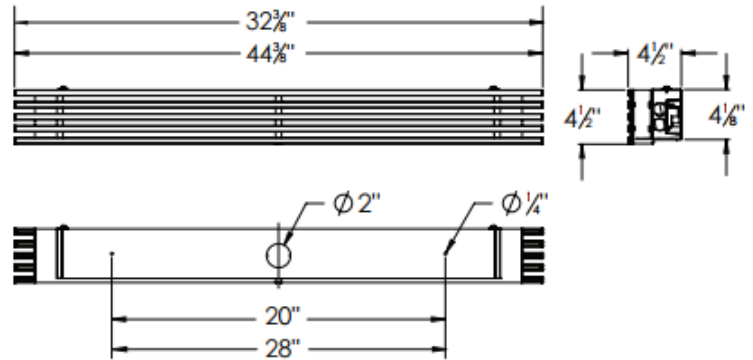

Finish:

- Internal housing is finished in lighting grade white baked gloss enamel paint.
- Frame assembly consists of extruded satin aluminum bands with a clear lacquer topcoat

Diffuser:

- Diffuser is .070" thick matte white acrylic that is integrated into aluminum frame assembly
- Frame mounts to electrical channel with two decorative screws

Electrical:

- This unit is direct wired with a low voltage electronic LED driver rated for 120-277V universal voltage
- The constant current LED driver is 0-10 VAC Dimmable



Lamping:

- Fixture includes linear LED modules producing:
- 32" – 2000 source lumens
- 44" – 3000 source lumens
- 3000K (CCT). Rated for 50,000 Hrs. LED life. 90 CRI.

Certification:

- All fixtures are cETLus listed for damp locations.

Warranty:

- Limited warranty: This fixture is free from defects in materials and workmanship for a period of 5 years from date of purchase
- Specifications and dimensions subject to change without notice

Dimensions:

- 20W: 4-1/2in(H) 32-3/8in(L) 4-1/2in(D)
- 30W: 4-1/2in(H) 44-3/8in(L) 4-1/2in(D)

Ordering Specifications:

Satin Aluminum	LED	Source Lumens	H	L	D	MC
AS2D03L00025023VBBAFX	20W	2000	4-1/2"	32-3/8"	4-1/2"	20"
AS2D03L00035044VBBAFX	30W	3000	4-1/2"	44-3/8"	4-1/2"	28"

