


LED Sleek Contemporary Vanity Light
Item# XVM03LX140XXVRAAFX

Construction:

- Fixture is ADA compliant and has die-cast aluminum end caps with a frosted white acrylic diffuser
- Power supply connection can be made in a standard J-box with a supplied 5in diameter J-box cover plate or can be made inside the housing without the need for a cover plate
- The ballast and wiring compartment is formed from .050 thick aluminum and is provided with keyhole mounting slots and wiring access
- The decorative end caps are die cast aluminum
- End caps are retained with thumbnuts for tool-less relamping

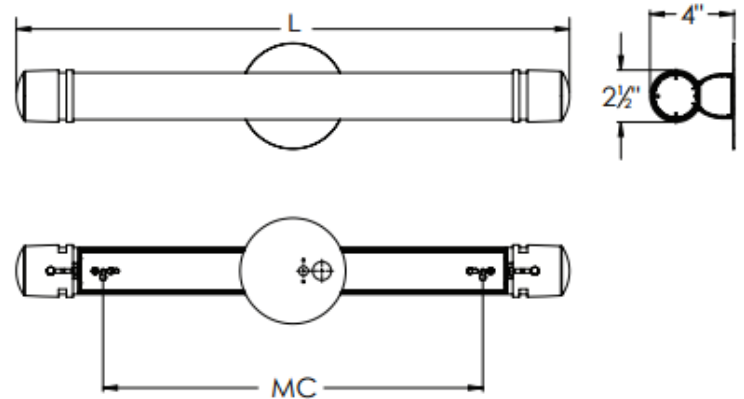

Finish:

All metal parts are plated in the following finishes
 Satin Nickel or Oil-Rubbed Bronze
 Please click on Options tab for Finish option

Diffuser:

Diffuser is .100" thick-frosted white extruded acrylic with internal linear prisms

Certification:

All fixtures are cULus listed for damp locations

Specifications:

Diffuser:

White Acrylic

Ordering Specifications:

Satin Nickel	Oil-Rubbed Bronze	LED	Source Lumens	CCT	H	L	D	MC
NSVM03L00014062VRVAFX	BRVM03L00014062VRVAFX	20W	1000	3000K	2-1/2"	26-1/4"	4"	18"
NSVM03L00414083VRAAFX	BRVM03L00414083VRAAFX	30W	1400	3000K	2-1/2"	38"	4"	18"
NSVM03L00124005VRAAFX	BRVM03L00124005VRAAFX	40W	2100	3000K	2-1/2"	50"	4"	18"

