

LED Vibrant Patient Room Lighting Item #NWNE03LXXXXBTQMAFX



Features:

- White linen patterned acrylic front panel provides a soft glow accent to this contemporary wall mount senior care overbed light.
- The walnut trim accents identify the graceful shape.
- The Marquette provides both ambient and task light with a four way pull switch, standard (120 volt only).
- Top diffuser and bottom diffuser are frosted white acrylic.

Construction:




- The light wiring channel is formed from 22-gauge steel and is provided with keyhole mounting slots and wiring access.
- An internal divider provides separate lamp compartments for controlled up light and down light. The decorative bands are stamped steel and glued to the diffuser.
- Fixture can mount horizontally only.
- Power connections can be made in the fixture wiring channel or in a standard junction box (not included).

Finish:

- Metal ends are walnut finish.
- Internal housing is finished in a lighting grade baked white enamel.

Diffuser:

- Diffuser is 0.070" thick matte white acrylic for the down light and a white linen pattern acrylic front.
- Frame mounts to electrical channel with two decorative screws.

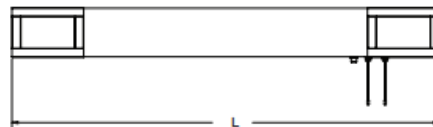

Electrical:

- Input 120VAC / 60Hz.
- The shorter length fixtures produce 1350 source lumens upward, and 2700 down, while the longer fixtures provide 1800 source lumens upward and 3600 down.
- Four position pull switch (on up, on down, on both, all off) are standard and located near the right side of the fixture.
- LED nightlight with on/off control pull-switch is included. Not compatible with dimmers.

LED:

- Integrated LED modules producing a total of 4050 or 5400 source lumens in 3000K CCT., 90 CRI
- Rated for 50,000 hours.

Certification:

- cETLus listed for damp locations.
- ADA

Warranty:

- Limited warranty: This fixture is free from defects in materials and workmanship for a period of 5 years from date-of-purchase.

Ordering Specifications:

Walnut	LED	Source Lumens	CCT	L	H	D
NWNE03L0483BTQMAFX	60W	1350 up/2700 down	3000K	38"	5"	4"
NWNE03L4505BTQMAFX	80W	1800 up/3600 down	3000K	50"	5"	4"

